


Using Clear Window Adhesive with your eColor Poster Printer

- On the printer: Paper Settings > Photo Papers > Light Photo Paper
- Poster Artist: Media Type > Lightweight Photo Paper
- We suggest flipping the image you are printing so you can stick the decal on the window from the inside and it can be seen in the correct orientation from the outside.
- To flip your image, Click on your image, then click the Flip Horizontal Icon.

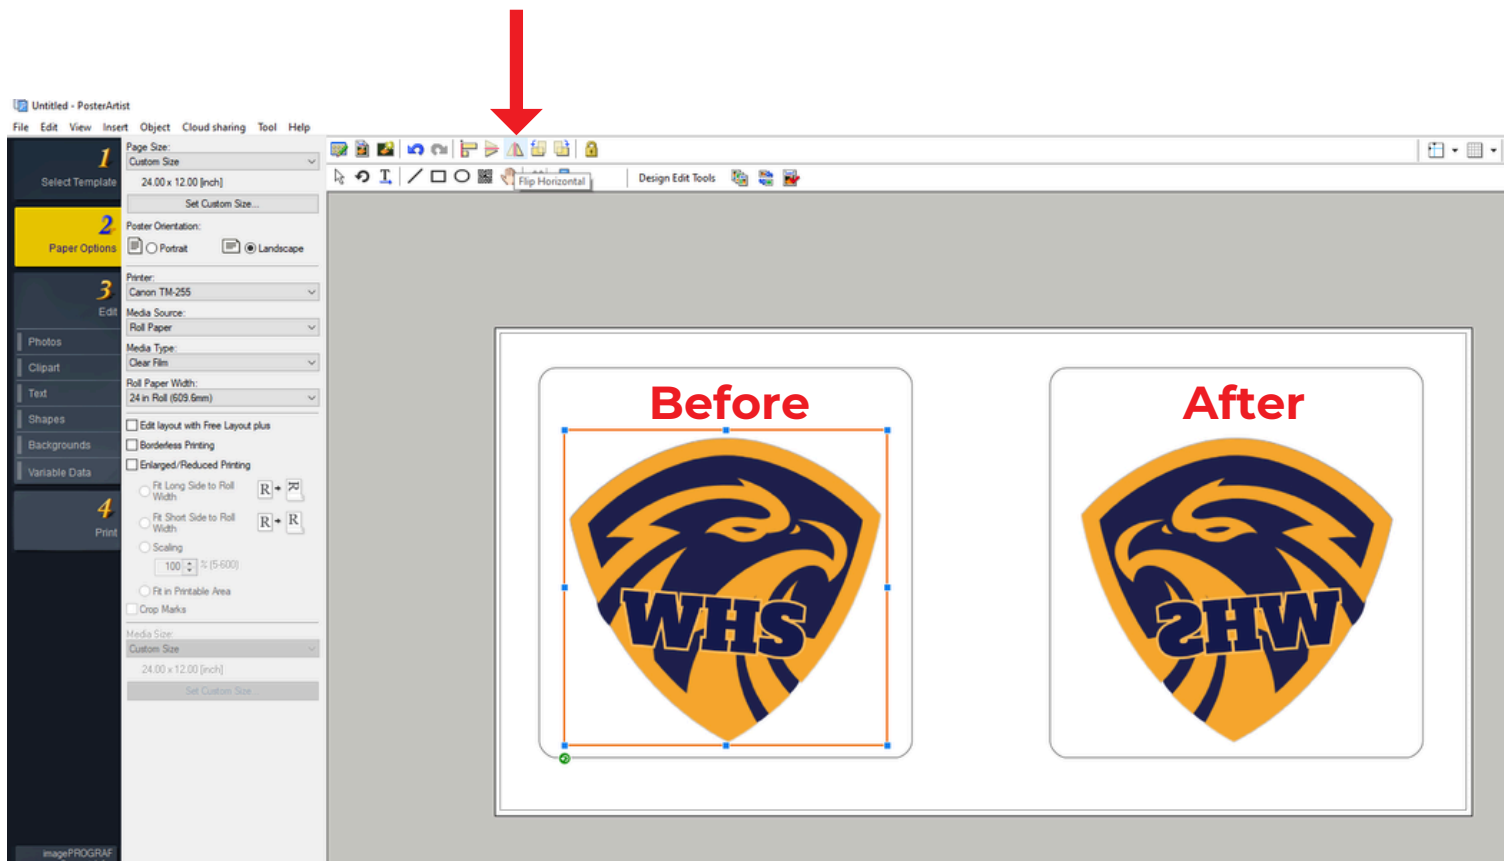

e c o l o r + Poster Printer by **PSI** | Presentation Systems Inc.

For questions call us at 973-304-1866 or 800-244-6381

If error occurs when loading paper (unsupported paper size) use these additional paper setting steps:

- On the home screen of the printer (only needs to be done once):
- Select the gear icon at the bottom of the screen (settings)
- Select DEVICE SETTINGS
- Select PAPER-RELATED SETTINGS
- Select ADVANCED PAPER SETTINGS
- Select PHOTO PAPERS
- Select LIGHT PHOTO PAPER
- Select DETECT PAPER SIZE
- Select DISABLE (This should apply the setting)
- Press the Home Button to the left of the screen
- Select LIGHT PHOTO PAPER at the center of the screen
- Select PAPER SETTINGS
- Select ADVANCED
- Select CUTTING MODE
- Select AUTO CUT (This should apply the setting)

When loading the Clear Window Adhesive into the printer:

- Follow the normal paper loading steps
- The printer will give you the message “Detect Paper Width is disabled. Do you want to keep it disabled and continue?” Select KEEP IT DISABLED AND CONTINUE
- Enter 24 inches as the roll size
- Lift and close the top cover (white plastic panel)

Please note that the media setting for Clear Window Adhesive will show up on the printer as “Light Photo Paper” but may show up in the Poster Artist software as “Lightweight Photo Paper”

Using Clear Window Adhesive with your TM255/355 eColor Poster Printer

- 1. Select the gear icon at the bottom of the screen (settings)
- 2. Select PRINTER SETTINGS
- 3. Select PAPER-RELATED SETTINGS
- 4. Select MEDIA TYPE SELECTION METHOD
- 5. Select MANUAL
- 6. Press the Back Button on the left of the screen
- 7. Scroll down and Select ADVANCED PAPER SETTINGS
- 8. Select PHOTO PAPERS
- 9. Select LIGHT PHOTO PAPER
- 16. Select CUTTING MODE
- 17. Select AUTO CUT (This should apply the setting)
- 10. Select DETECT PAPER SIZE
- 11. Select DISABLE (This should apply the setting)
- 12. Press the Home Button to the left of the screen