

## Printer Settings:

- **Economy Paper** - Coated > Matte Coated 90 (use blue end cap adapters)
- **Matte** - Coated Papers> MatteCoated 170
- **Certificate**- Coated Papers> MatteCoated 170
- **Glossy** - Photo paper> GlossyPhoto 200g (use blue end cap adapters)
- **Charlie Adhesive** - Sign > watRes Adh Mat PP (use blue end cap adapters)
- **Banner Vinyl - Sign** > watRes Mat Ban V

>Make sure you set Banner Vinyl to auto-cut before printing:

Automatic Cut on eColor Poster Printer:

1. Press Paper Type on Screen
2. Paper Settings
3. Advanced
4. Cutting Mode
5. Automatic

- **Clear Window Adhesive- Photo>Light Photo Paper** (use blue end cap adapters)

\* If you are loading Clear Window Adhesive for the first time, email [tech@presentationsys.com](mailto:tech@presentationsys.com) to request important info

- **Wrapping Paper**- Photo>Wrapping Paper on TM200/205/300/305 models (ecolor+) & Canon Light Photo Paper on TM255/355 models (ecolor+ S2)

## Poster Artist Settings:

- **Economy Paper** - Canon Matte Coated Paper 90gsm
- **Matte** - Canon Matte Coated Paper 170gsm
- **Certificate** - Canon Matte Coated Paper 170gsm
- **Glossy** - Canon Glossy Photo Paper 200gsm
- **Charlie Adhesive** - Canon WaterResistant Adh MattePP
- **Banner Vinyl** - CanonWaterResistMatteBannerVinyl
- **Clear Window Adhesive**- Lightweight Photo Paper
- **Wrapping Paper**- Canon Light Photo Paper / Wrapping Paper (Check Model)